

# 4600

## User Guide



### **Compatible Equipment**

4601	Long range and short range pendant transmitters
4602	Hand held PA
4603	Programmable transmitter
4604	Contact transmitter
4605	Short range dual channel transmitter
4608	PIR
4609	Smoke detector
7150	Viper radio vibration detector (supplied by Weyrad Electronics).

## User Commands

### From the Keypad

Full Set	User code + 2
Unset	User code
Part Set	User code + 1
Omit Zones	User code + 2 + OMIT + zone number. (Repeat OMIT + zone number for all zones to be omitted.)
Keypad PA	1 + 3
Silence Bells	User code
Reset	User code
Change User Code	6 + Enter + existing code + new code + Enter
Walk Test	3 + Enter + User code + activate detectors + Enter to end test On older units: User code + 3 + Enter + activate detectors + Enter to end test
Chime On/Off	4 + Enter + User code

### From the 4605UK-55 Remote Setting Device

Full Set	Press top button
Unset	Press top button
PA	Press the two orange side buttons together