

4700 User Guide



Compatible Equipment

4725	Remote Keypad
4702	PA Transmitter
4704	Door Contact Transmitter
4705	PIR Transmitter
960	Speech Communicator

User Commands

Set/Unset System	User code
Omit zone	User code + Omit + Zone number + Enter (repeat for all zones to be omitted)
Part Set	Part Set + ENTER + User code
Test Bells	Bell Test + ENTER + User code
Walk Test	Walk Test + ENTER User code User code to end test
Change User code	6 + ENTER + current User code + new User code + ENTER.
Chime On/Off	Chime + ENTER + User code
Read Log	Scroll + ENTER