

9454/9455

Installation and User Guide



Compatible Equipment

9425	Remote Keypad
9040	Internal Sounder
660	Speech Communicator
8440	4-Channel 'Minicom'

User Commands

Full Set System	1 + ENTER + User code
Part Set System	2 + ENTER + User code
Unset/Reset System	User code
Omit zone	1 (or 2) + ENTER + User code + OMIT + zone number (repeat OMIT + zone number for other zones as required).
Omit 24 hr zone	OMIT + ENTER + User code + zone number (+ zone number for other zones as required)
Change User code	4 + ENTER + Old code + Old code (the system beeps twice)+ New code (the system beeps twice)
Read Log	5 + ENTER + User code 1 to read earlier events 3 to read later events ENTER to leave the log
Chime On/Off	7 + ENTER + User code
Bell Test	8 + ENTER + User code
Walk Test	9 + ENTER + User code ENTER to end the test